

# CAT600 DCP (Digital Copper Plumbing) Bulk Spool Termination Manual

---

Thank you for choosing AudioQuest. This manual provides instruction for preparing and terminating CAT600 DCP bulk (unterminated) cable.

Please be careful when using sharp tools. We recommend wearing safety glasses.

To terminate AudioQuest CAT600 DCP cables you will need the following tools:

- **Sharp knife or razor blade**
- **Wire cutters**
- **Cat6/6a/7 crimping tool and die**

# CAT600 DCP Termination Manual

The directionality of the cable follows the direction of the printing from source to destination and is indicated by arrows.


## Step 1

Place boot onto cable. Strip jacket back 0.75". The directionality of the cable flows from Side #1 to Side #2 along with the arrows and direction of the printing. Side #1 is to the left of the razor blade, and side #2 is to the right of the boot.



## Step 2

Cut out filler and center divider.

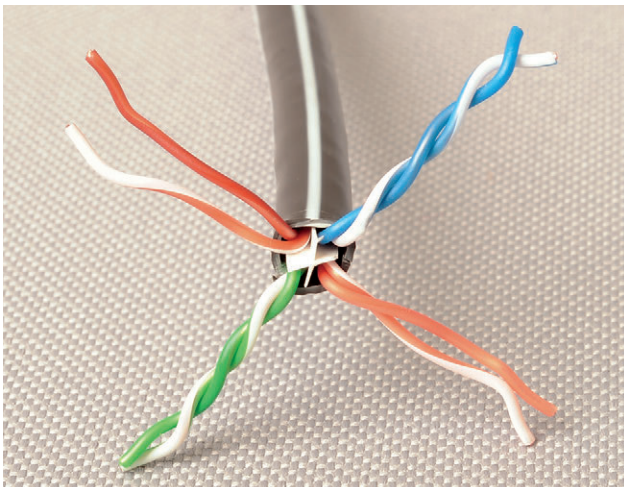

## Step 3

Align wires into the formation below. The separator will be put on later; the illustration below just shows the orientation of the wires.




Solid: Brown Green Blue Orange

Striped: Brown Blue Green Orange

# CAT600 DCP Termination Manual


## Step 4

Cut wires at an angle so they can be inserted easily into plastic separator.

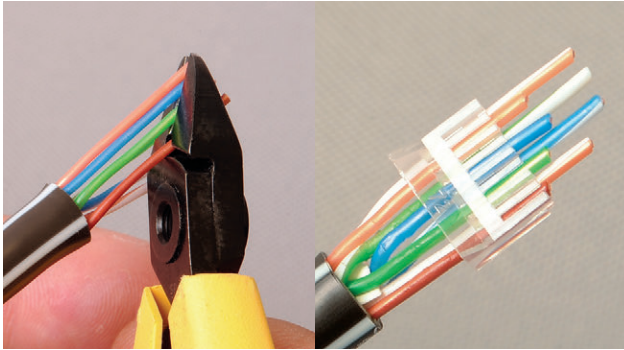


## Step 6

Insert wires and separators into the plugs on both sides and crimp tightly.

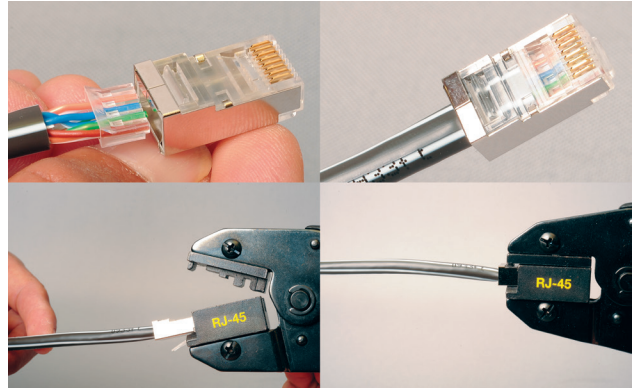

## Step 5

Trim wires to 0.5".

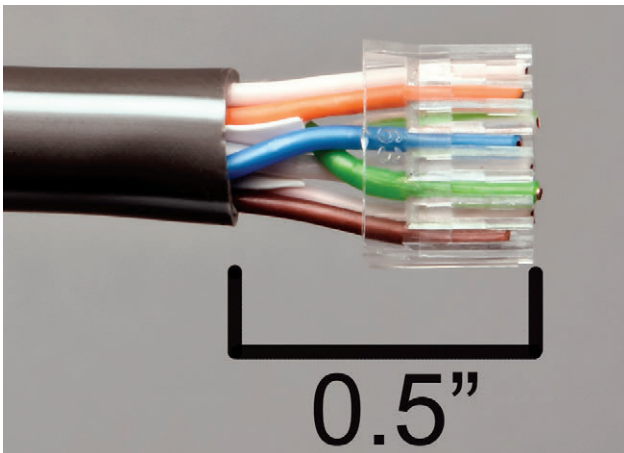

## Step 7

Slide boots over the plugs on both sides, and the cable is finished.

